

Faceted Ice Cream Scoop



Needed:

Pen mandrel, 7/16" drill, bushings 118A, 2-part Epoxy glue

Minimum blank size required 1-1/2" x 1-1/2" x 3-1/2" to 4" long

Preparing the blank


1. With a 7/16" drill, drill a hole lengthwise through the centre of the blank.

Squaring the blank

1. Mount one bushing, short extension first, on the pen mandrel. Mount the blank and the other bushings with the long extension first.



2. Use a parting chisel to square both ends of the blank to the bushing diameter.

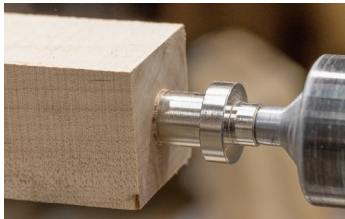

3. Take the blank off the lathe. Remove the small ridge by sanding it down flat.



william wood-write

penblanks.ca

Turning the blank

1. Remount the first bushing (long extension first), followed by the blank. Then mount the second bushing with the short extension first.



2. Turn the blank to the profile of your choice, down to the diameter of the bushings.



3. Sand and finish.

Assembly

1. Epoxy both ends into the blank and let it fully cure.

